

Contents

SETTING DESCRIPTION.....	1
1.Overview.....	1
2.Initial state.....	1
USER SETTINGS.....	2
1.Preparation word.....	2
2.Adding Master Password when Initial Use.....	2
3.Going to the Main Menu.....	2
4.Adding Users.....	3
5.Deleting Users.....	4
6.Time setting.....	5
7.Installation Settings (only fully automatic locks are supported).....	5
8.Network Setting(support for networked products only).....	6
9.Two-factor authentication settings.....	7
10.Restore factory settings.....	7
11.Query the number of users.....	7
12.Read the record.....	8
13.Language settings.....	8
14.Voice settings.....	9
"TUYA APP" ONLINE TUTORIAL.....	10

Setting Description

1.Overview

This product has hierarchical authority management function in which the system divides users into three categories: master users, standard users and time-limited users. In addition to the permission for opening doors, master users also have administrative permissions such as adding, deleting and setting. Standard users and time-limited users only have the permission to open doors. The passwords of time-limited users can be generated on mobile phones using the master's password and such kind of users can open doors within a specified period of time. The system can create up to 10 master users and 240 standard users and can store up to 250 passwords or 249 cards or 100 fingerprints. The system will be locked for 90 seconds in the case of the user entering a wrong password, fingerprint or card number consecutively for five times.

2.Initial state

In initial state, doors can be opened by any fingerprint, card and password.


User Settings

1.Preparation word

Full automatic: for the first use, please first charge the battery, put it in the battery box, close the battery cover, and the smart lock will enter the standby state.

Semi-automatic: for the first use, install 4 basic dry batteries (pay attention to the positive and negative poles), cover the battery cover, and the smart lock enters the standby state.

2.Adding Master Password when Initial Use

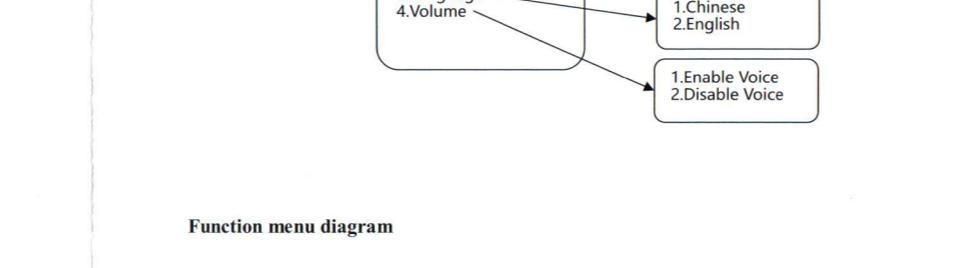

(1) Press the * key shortly, then press the # key, the voice prompt "Add a management user, please enter a 6-8 digit password", the user enters a 6-8 digit password, and press the # key to confirm.
(2) Voice prompt "Please enter the same password again", and then enter the same password.
(3) Voice prompt "User 000 added successfully", the system automatically jumps to the main menu, the user exits or performs other operations according to the voice navigation.

Tips:

- This master password can be used to generate "time-limited password"

3.Going to the Main Menu

Turn on the touch screen and press "*" and then "#" to enter the main menu or press the SET button on the rear lock plate. To enter the main menu, you must enter the administrator information to verify. After entering the main menu, the voice prompt "Please press the number key to select the operation", the user can press the corresponding number key to select the operation according to the menu number.

(1)Add fingerprint

The user places his finger on the fingerprint sensor and the voice prompt "please press your finger again", the user places the same finger on the sensor. The voice prompt "Successfully added, can be added continuously. To exit, please press the * key", the user can continue to add.

(2) Add password

The user enters a 6 to 8-digit password, presses the # key to confirm, the voice prompt "please enter the same password again", and the user enters the same password. Voice prompt "Add successfully"

(3) Add card

The user brings the card close to the antenna receiving area, and the voice prompt "Add successfully"

(4) Add remote control


The user presses any key of the remote control that needs to be added, and the voice prompt "Add successfully"

friendly reminder:

- For security reasons, it is not recommended to add the remote control as a manager user
- Entering a fingerprint requires the user to record four times in a row
- When collecting fingerprints, try to collect the same finger at different positions as many times as possible to make fingerprints easier to use for subsequent verification.

5.Deleting Users

(1) Check delete user

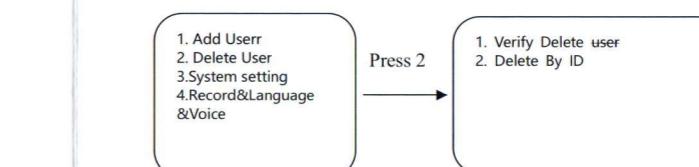

Remarks: semi-automatic lock, "installation settings", "function settings" menu changed to "network settings", "two-factor authentication settings" menu

4.Adding Users

Tips:


- This master password can be used to generate "time-limited password"

3.Going to the Main Menu

The voice prompt "Please verify the user to be deleted", the user can enter the password, fingerprint, card or remote control to be deleted. If the user exists in the system, the voice prompt "Delete successfully", if the user does not exist, the voice prompt "Operation failed".

Voice prompt "Can be deleted continuously, please press the * key to exit", the user can enter the deletion user continuously.

(2)Delete users by number

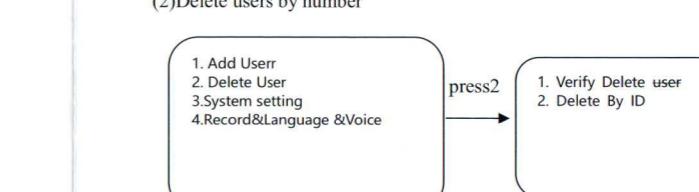

(1)Add fingerprint

The user places his finger on the fingerprint sensor and the voice prompt "please press your finger again", the user places the same finger on the sensor. The voice prompt "Successfully added, can be added continuously. To exit, please press the * key", the user can continue to add.

(2) Add password

The user enters a 6 to 8-digit password, presses the # key to confirm, the voice prompt "please enter the same password again", and the user enters the same password. Voice prompt "Add successfully"

(3) Add card


The user brings the card close to the antenna receiving area, and the voice prompt "Add successfully"

(4) Add remote control

The user presses any key of the remote control that needs to be added, and the voice prompt "Add successfully"

- For security reasons, it is not recommended to add the remote control as a manager user
- Entering a fingerprint requires the user to record four times in a row
- When collecting fingerprints, try to collect the same finger at different positions as many times as possible to make fingerprints easier to use for subsequent verification.


7.Installation Settings (only fully automatic locks are supported)

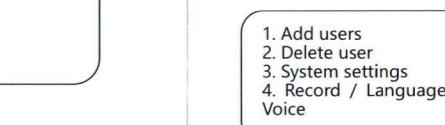


(1)Opening direction setting




Press "1" to set left or right door opening
(2)Delay lock

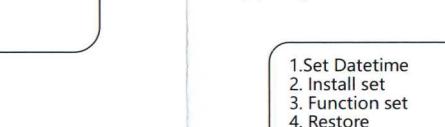

6.Time setting

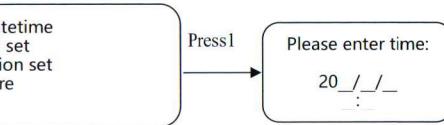

Voice prompt "Please enter the time", enter the time according to the time format displayed on the interface.

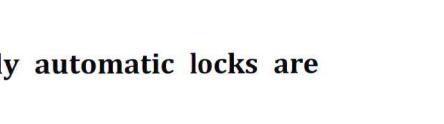

(1)Opening direction setting



5

